



# F3

## STEREO OUT

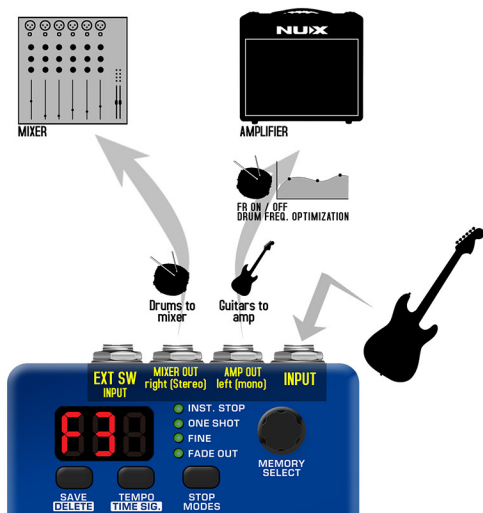

## RIGHT OUT (MIXER)

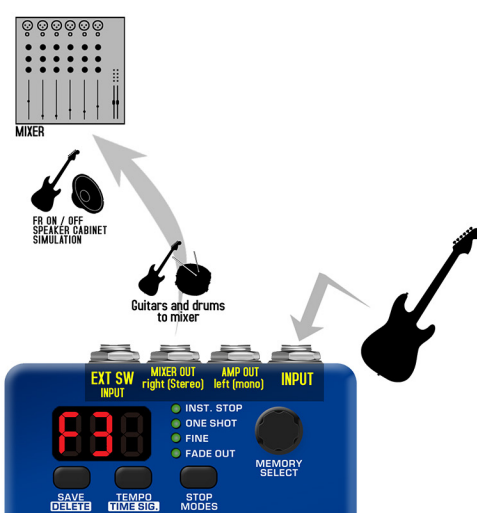


## LEFT OUT (AMP)




# F4


## STEREO OUT

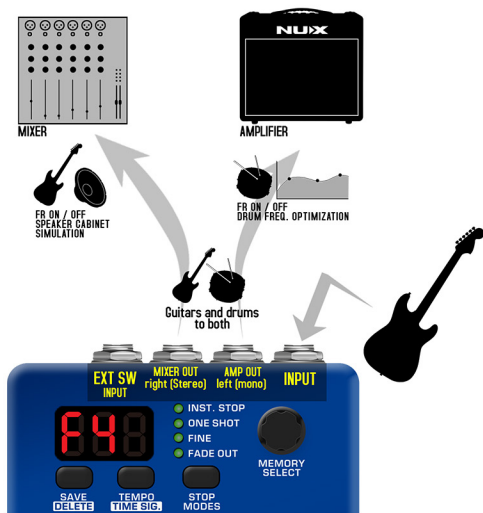

## RIGHT OUT (MIXER)

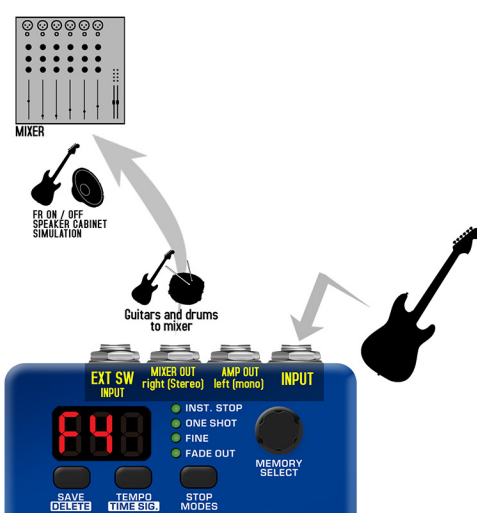


## LEFT OUT (AMP)

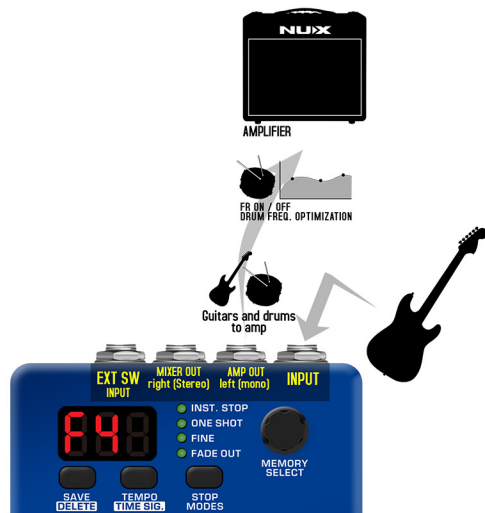

# F5

## STEREO OUT

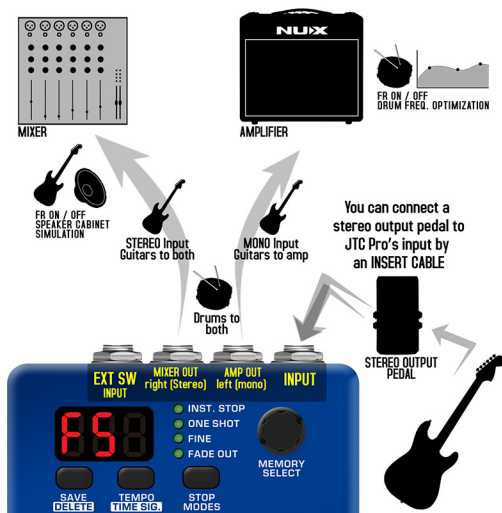

## HOW TO CHANGE THE OUTPUT MODE

1. Press and HOLD the "Loop footswitch" and plug in the power cable

2. Press "Stop Modes" button

3. Use "Memory Select" knob and select output mode F3, F4, F5

