

Quick Start Guide

TC ELECTRONIC QUINTESSANCE HARMONY

USB - Connects to your computer for firmware updates and TonePrint editing.

MASH LED - This LED lights up to show when the MASH function is active.

Key - Selects the musical key used to generate harmonies.

Mix - Controls the amount of original dry signal versus the pitch shifted signal at the output.

Output

Footswitch - Turns the effect on and off. Press and hold to activate the MASH function.


Power Input - Connect a 9V / >100 mA power supply.

Scale - Selects the musical scale used to generate harmonies.

Key Switch - Allows access to additional sharp keys.

Harmony - Controls which musical intervals will be generated from the chosen key and scale.

Latch/Momen - Chooses between Latch and Momentary footswitch modes.

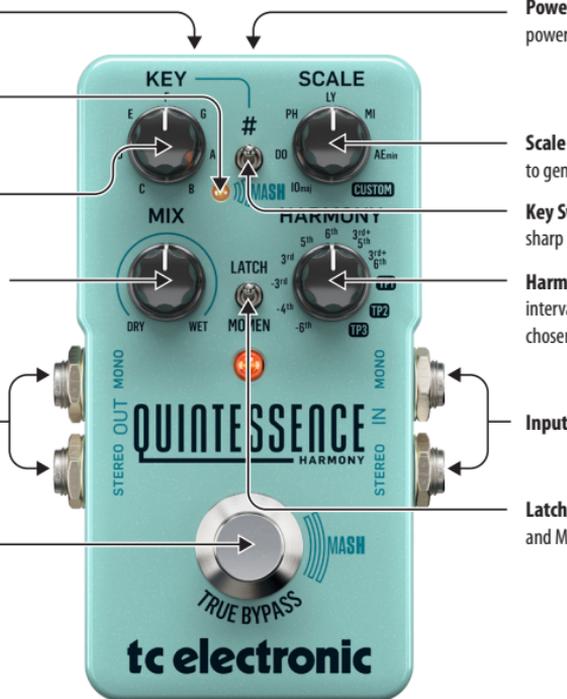

Visit tcelectronic.com to download the full manual