

Quick Start Guide

TC ELECTRONIC SHAKER VIBRATO

USB - Connects to your computer for firmware updates and TonePrint editing.

Power - Connect a 9V / >100 mA power supply.

Speed - Adjusts the amount of time between the peaks of the vibrato effect.

Depth - Adjusts the intensity of the vibrato effect.

Rise time - Adjusts the time it takes for the vibrato to reach the maximum intensity set by the Depth knob.

Tone - Shifts the effect's emphasis toward higher or lower frequencies.

Output

Input

Footswitch - Turns the effect on and off.

Vibrato type switch - Selects between standard Vibrato on/off, custom TonePrint, and a Latch setting where the pedal is only active when you press and hold the footswitch.



Visit tcelectronic.com to download the full manual