

Quick Start Guide

TC ELECTRONIC SUB 'N' UP OCTAVER

USB - Connects to your computer for firmware updates and TonePrint editing.

Power Input - Connect a 9V / >100 mA power supply.

Dry - Sets the output level for the dry signal.

Up - Adds a harmony voice one octave above the dry signal.

Sub - Adds a harmony voice one octave below the dry signal.

Sub 2 - Adds a harmony voice two octaves below the dry signal.

Output

Input

Footswitch - Turns the effect on and off.

Mode - Choose between Polyphonic, TonePrint and Classic modes.



Visit tcelectronic.com to download the full manual